

Evo2 • EvoMAX • Aurora • EvoFG • QC Series LED lights only

InstaTouch enabled LED Pool Lights may be controlled using either Aqua-Quip's Insta Touch remote-control system (see over) or by manually controlling the lights at a wall switch.

Here, we describe manual operation using a wall switch.

CHANGING MODES

When the lights are turned on for the very first time, they will light in **Slow Scroll** (Mode 9 – See table, below). You advance from the current mode to the next mode by turning the light off for between 2 seconds - 5 seconds, then turning it back on. Each subsequent off/on cycle will advance to the next mode. There are seven fixed colours, six colour-changing animated shows, and the ability to select your own fixed colour from a wide palette.

MODE	NAME	MODE	NAME
1	BLUE (fixed colour)	8	SEASIDE (Colour show – cool colours)
2	AQUA (fixed colour)	9	SLOW SCROLL (Colour show – all colours)
3	GREEN (fixed colour)	10	RAPID SCROLL (Colour show – as above but faster)
4	GOLD (fixed colour)	11	FIREWORKS (Colour show – emulating a fireworks display)
5	MAGENTA (fixed colour)	12	DISCO (Colour show with high activity)
6	RED (fixed colour)	13	FLASH (Colour show – jumping between colours)
7	WHITE (fixed colour)	14	COLOUR SELECTION PALETTE (Choose your own fixed colour)

Once you have reached Mode 14 (Colour Selection Palette), the next off-then-on cycle will take you back to Mode 1 (Blue).

Note: Switching off, waiting less than 2 seconds, then switching back on may result in incorrect operation.

If the light is turned off for longer than eight seconds it remembers what mode it was in, and it turns back on in this mode. Once you have selected a colour or show which you enjoy, you can turn the lights off knowing that they will turn on again the next evening with this same colour or show.

SYNCHRONISATION

If lights fall out of synchronisation for any reason: they may be re-synchronised by turning off, waiting for between 5 and 8 seconds, then turning back on. This will reset the lights to Mode 1 – Blue.

Switch OFF Time	RESULT
OFF for 2-5 seconds/ON	Progresses to Next Mode
OFF for 5-8 seconds/ON	Re-synchronises all Lights
OFF for more than 8 seconds/ON	Recalls last active Mode

COLOUR SELECTION PALETTE

When you engage Mode 14 (Colour Selection Palette) the lamp will slowly scroll through a range of colours. When you see the colour you want, immediately turn off the light. Wait ten seconds (or more) before you turn the light back on. The lamp will remember your chosen colour, and it will light up in this colour.

The first time you engage the Colour Selection Palette it will start scrolling from a pure red colour (refer to the colour palette guide, below). The next time you engage the Colour Selection Palette, the scrolling will start from the colour you selected last time.

