


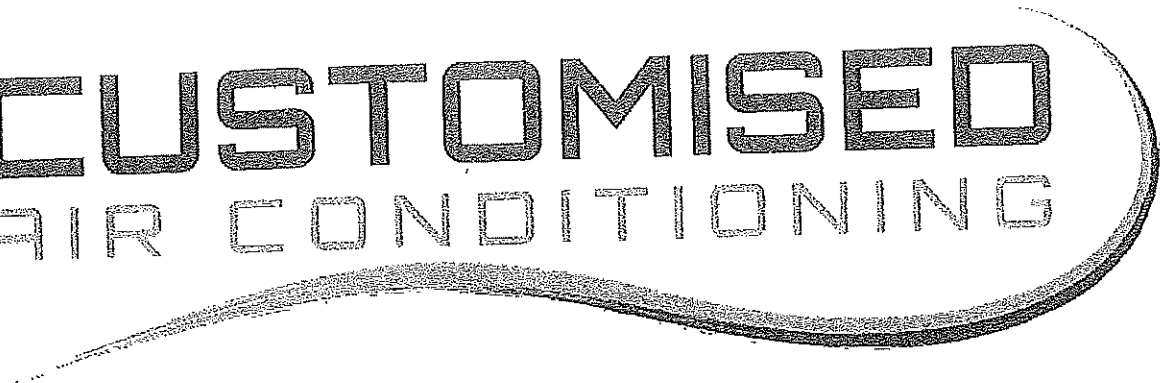

DAIKIN ZONE CONTROLLER MANUAL

U 6/10 Hammond Rd, Cockburn Central WA 6164
Telephone (08) 9417 1071
www.customisedairconditioning.com.au

CUSTOMISED AIR CONDITIONING



Operating Instructions

The following are some simple tips on operating your new Ducted Refrigerated Air Conditioning system to ensure you achieve the maximum performance and efficiency.

- (1) Before turning on the air conditioner, ensure that there are at least two zones open;
- (2) For maximum efficiency turn the air conditioner on early in the day before the house heats up – or - use the timer to turn the air conditioner on a few hours before you get home;
- (3) If you are only leaving the house for a few hours, rather than turn the air conditioner off, leave it running and raise (cooling mode) or lower (heating mode) the temperature by a couple of degrees;
- (4) Always ensure that the doors of the rooms being air-conditioned remain open at least 300 mm to allow the air to return back to the return air grille;
- (5) Clean the return air filter approximately every 3 months;
- (6) If the system stops for any reason and a fault code appears on the control panel e.g. "E0" go to the isolator switch, located adjacent to the outdoor unit, and turn it off for 5 minutes then turn it back on. If this does not clear the fault then contact Customised Air-conditioning.

Please note: Fault codes may vary depending on brand.

Thank you for selecting Customised Air-conditioning to install your new air-conditioning system.

Kind regards,

Darren Harding
Director
Customised Air-conditioning

New Daikin Zone Controller

How to set;

1. Time

2. Timers (3 types)

3. Zones

4. Sensors


5. Names

6. Field Codes



4. Press Shift button. Adjust is displayed “0000” blinks

6. Press Enter button. Set time & day displayed

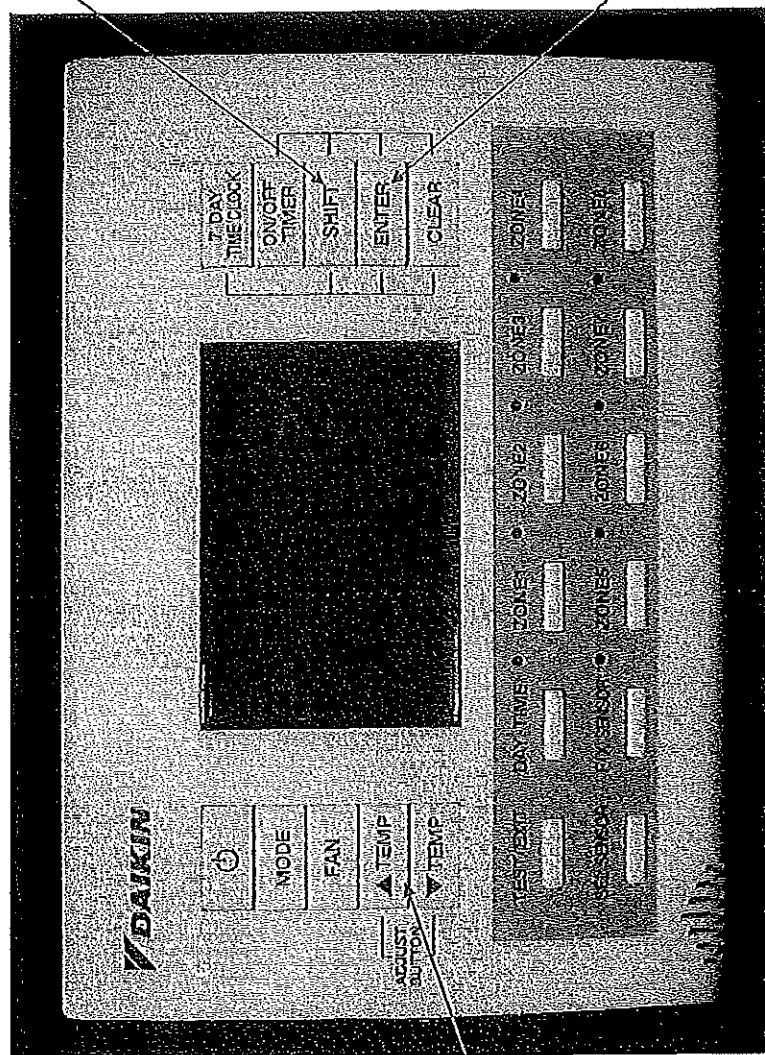



**-2. Press Shift
button.
Adjust is
displayed "01
blinks**

3. Press temp up/down to set timer ON hrs


4. Press Enter button normal display appears with "ON"

Refer Pg15

To set "OFF TIMER" at step 1 press timer button twice to display "OFF".
"ON & OFF" Timer can be combined.



SETTING SIMPLE 7 DAY TIMER

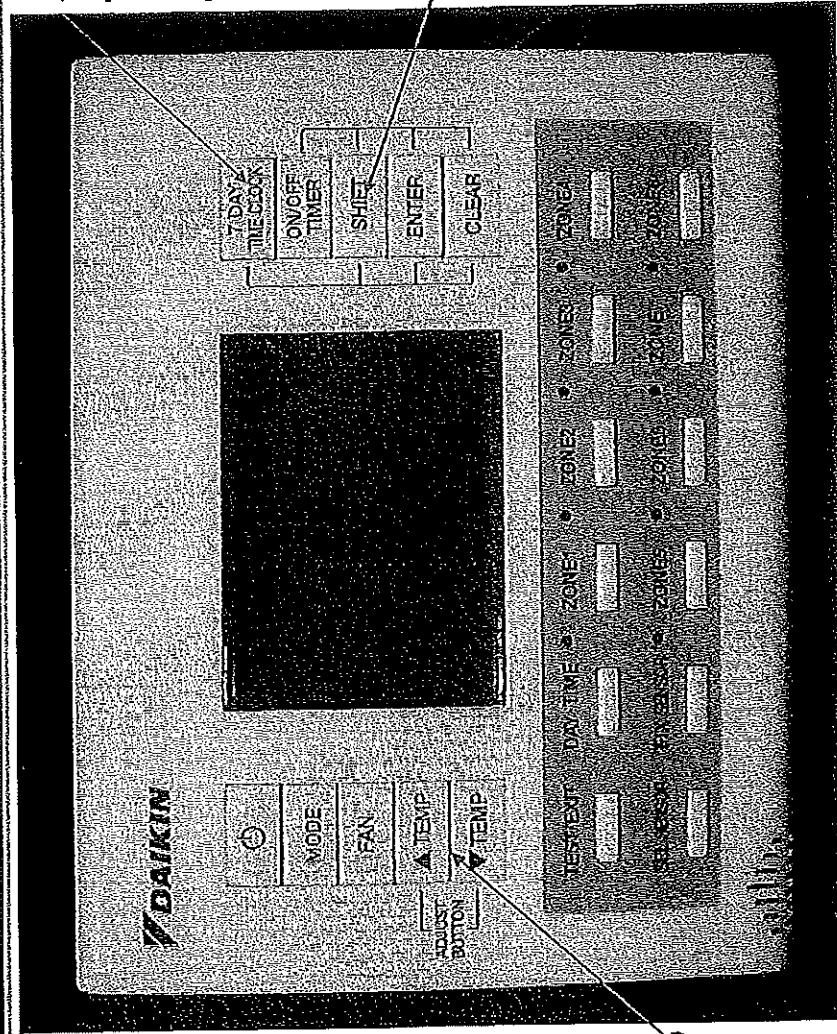

1. Press 7 Day Time Clock button.

To change to another day keep pressing the button.

2. Press Shift button.

Adjust is displayed "0000" blinks

3. Press temp up/down to set ON time

Refer Pg15

DAIKIN

SETTING SIMPLE 7 DAY TIMER


9. Press temp up/down to set temperature

8. Press Shift button.

Adjust is displayed & temperature can be set.

10. Press Enter button. PROG1 blinks

11. Press Test/Exit button to return to normal display.

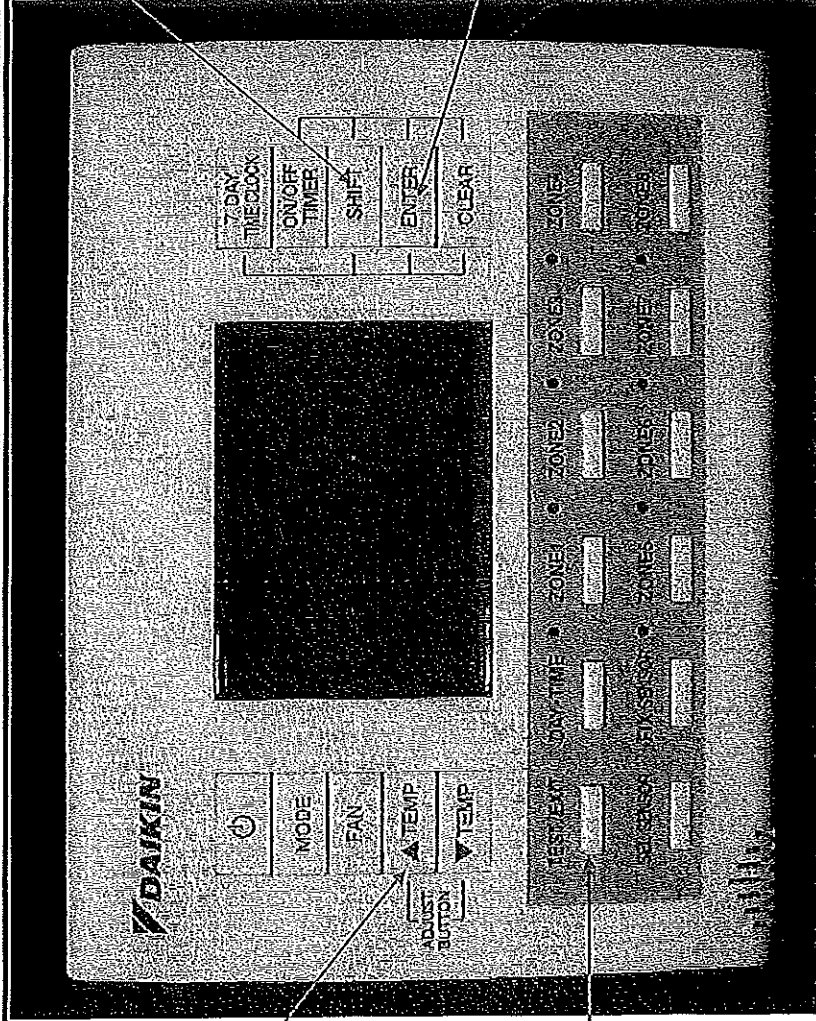


To set program 2, press 7 Day Time clock Button again & repeat procedure



SETTING SIMPLE 7 DAY TIMER

(Using copy mode)

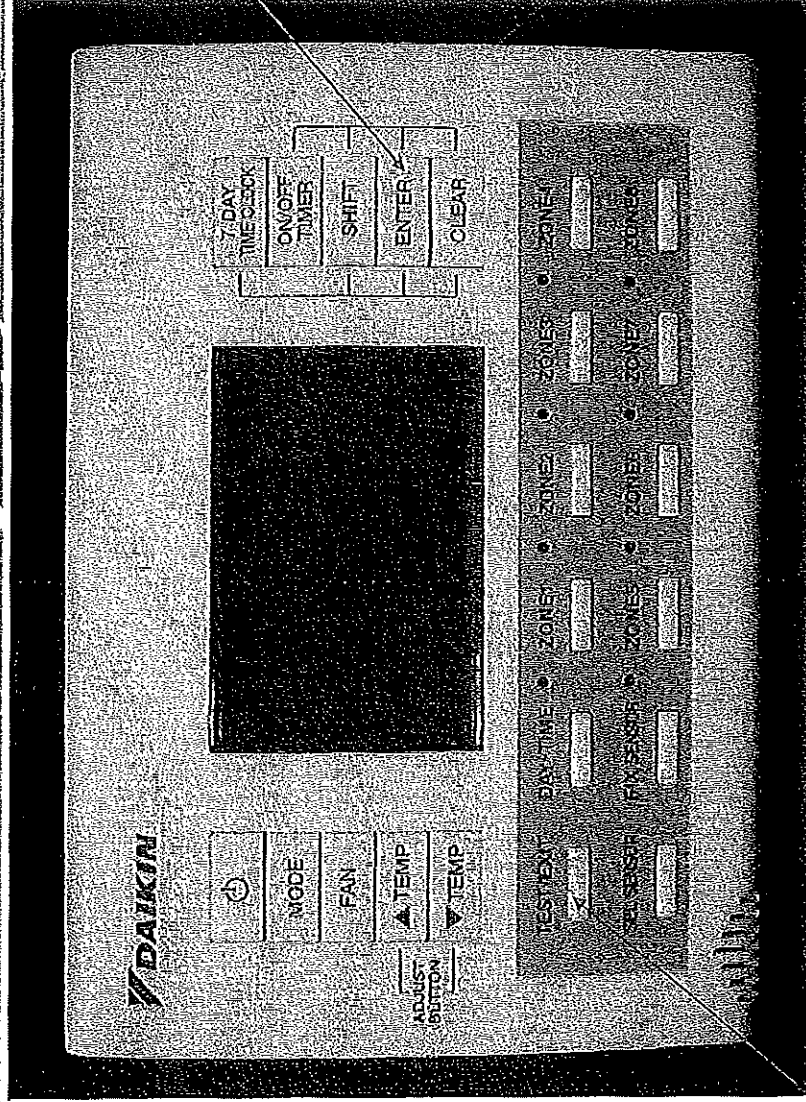

4. Press Enter
button PROG1
blinks


5. Press Test/Exit button to return to normal display.

 


2. Press Shift button Adjust is displayed “0000” blinks

3. Press temp up/down to set ON time


Refer Pg16

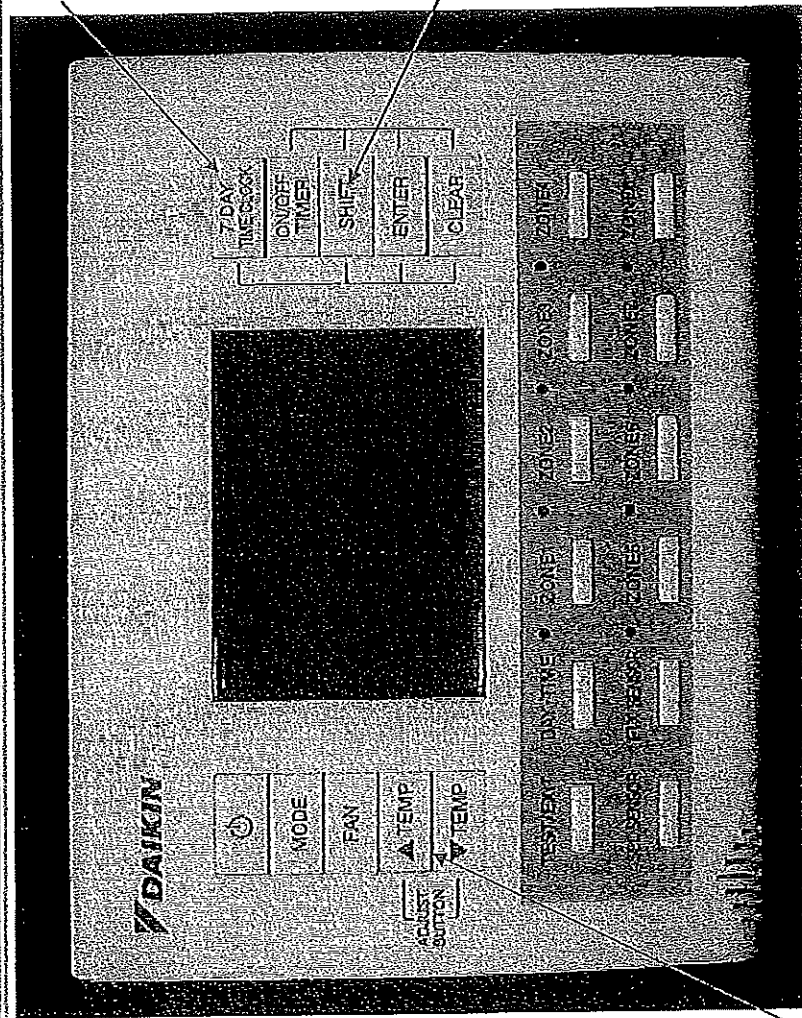



8. Press Shift button Adjust is displayed & temperature can be set.

 
10. Press shift button and “Adjust Zone” is displayed



DAIKIN

ZONE CONTROL

4. Zone1 LED
lights up and
Zone 1 is "ON"

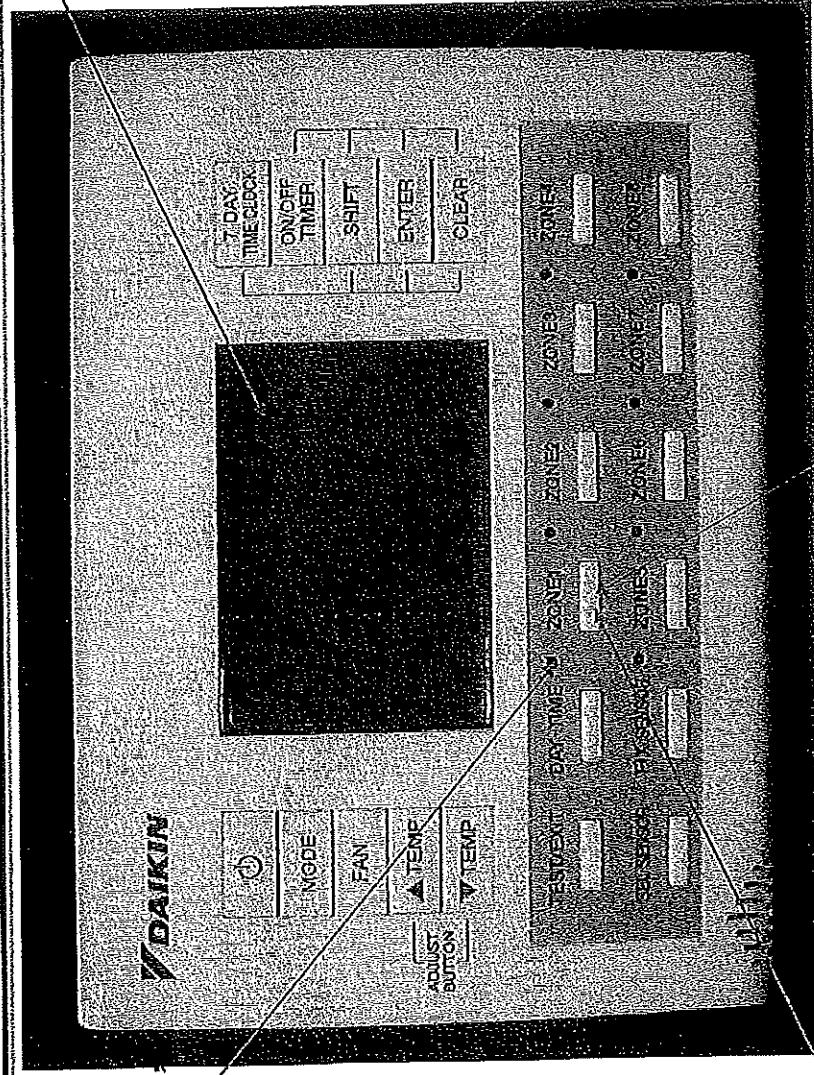


2. Zone 1 is
displayed on
screen

1. Press Zone 1 button once.

3. Press Zone 1 button again.




2. “....Zone1” is displayed.
3. 1. Press Shift button for 6 secs
4. Press Shift button to move cursor.
5. Press Enter button to move to next zone and sensors.

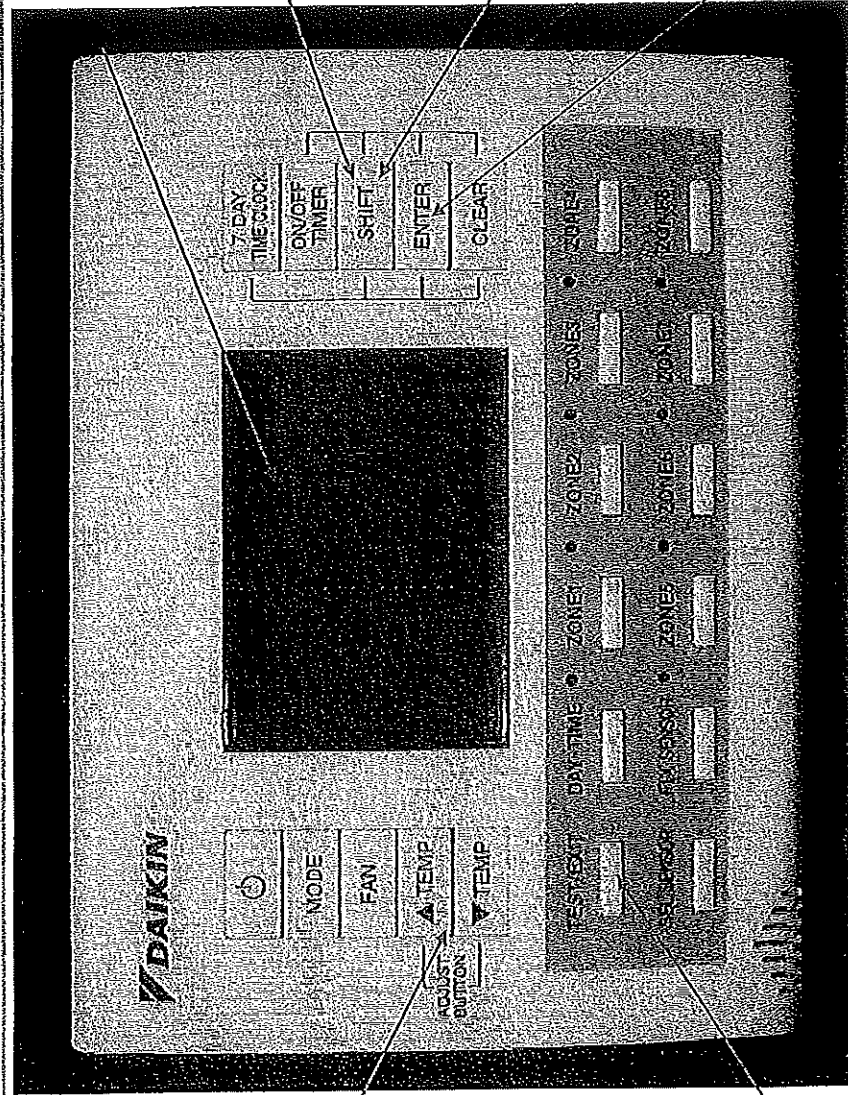

3. Press
temp
up/down
to enter a
character
A to Z,
a to z
0 to 9

5. Press Test/Exit button to return to normal display.

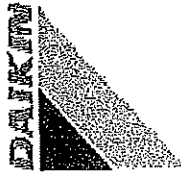

CLEAR INDIVIDUAL SETTINGS

1. Press 7 Day Time Clock button.
Keep pressing button until you reach required setting

2. Press shift button eg; 0600 blinks.

3. Press clear button for 6 secs

4. Press Test/Exit button to return to normal display.